



Emergency Alarm System

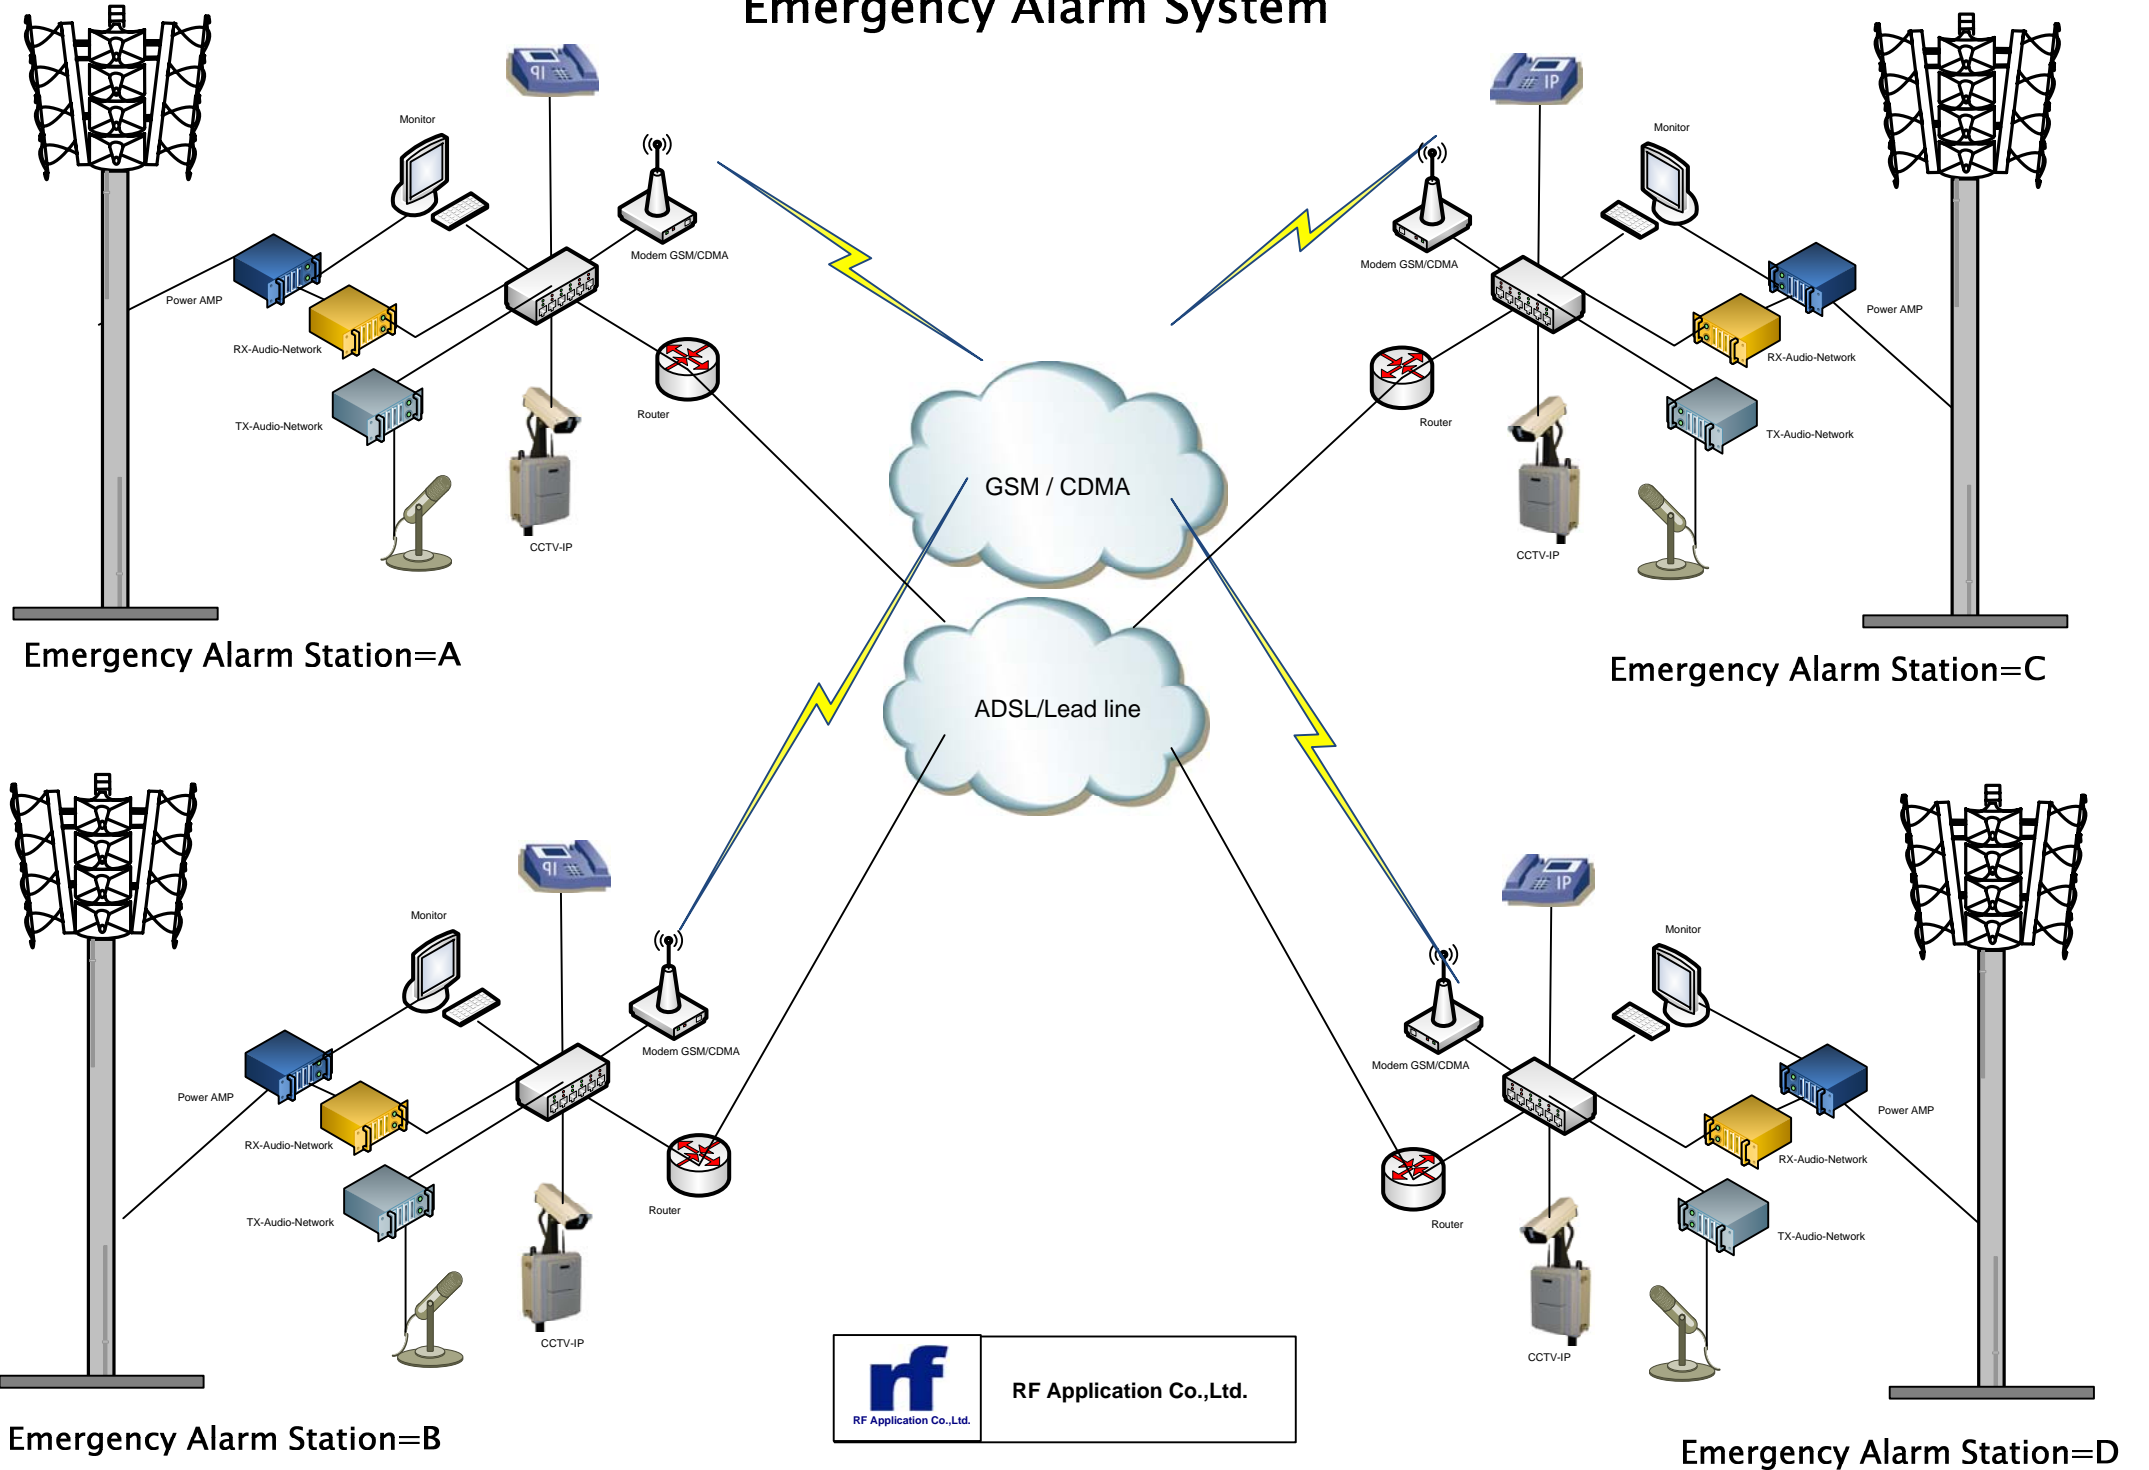

Emergency Alarm System

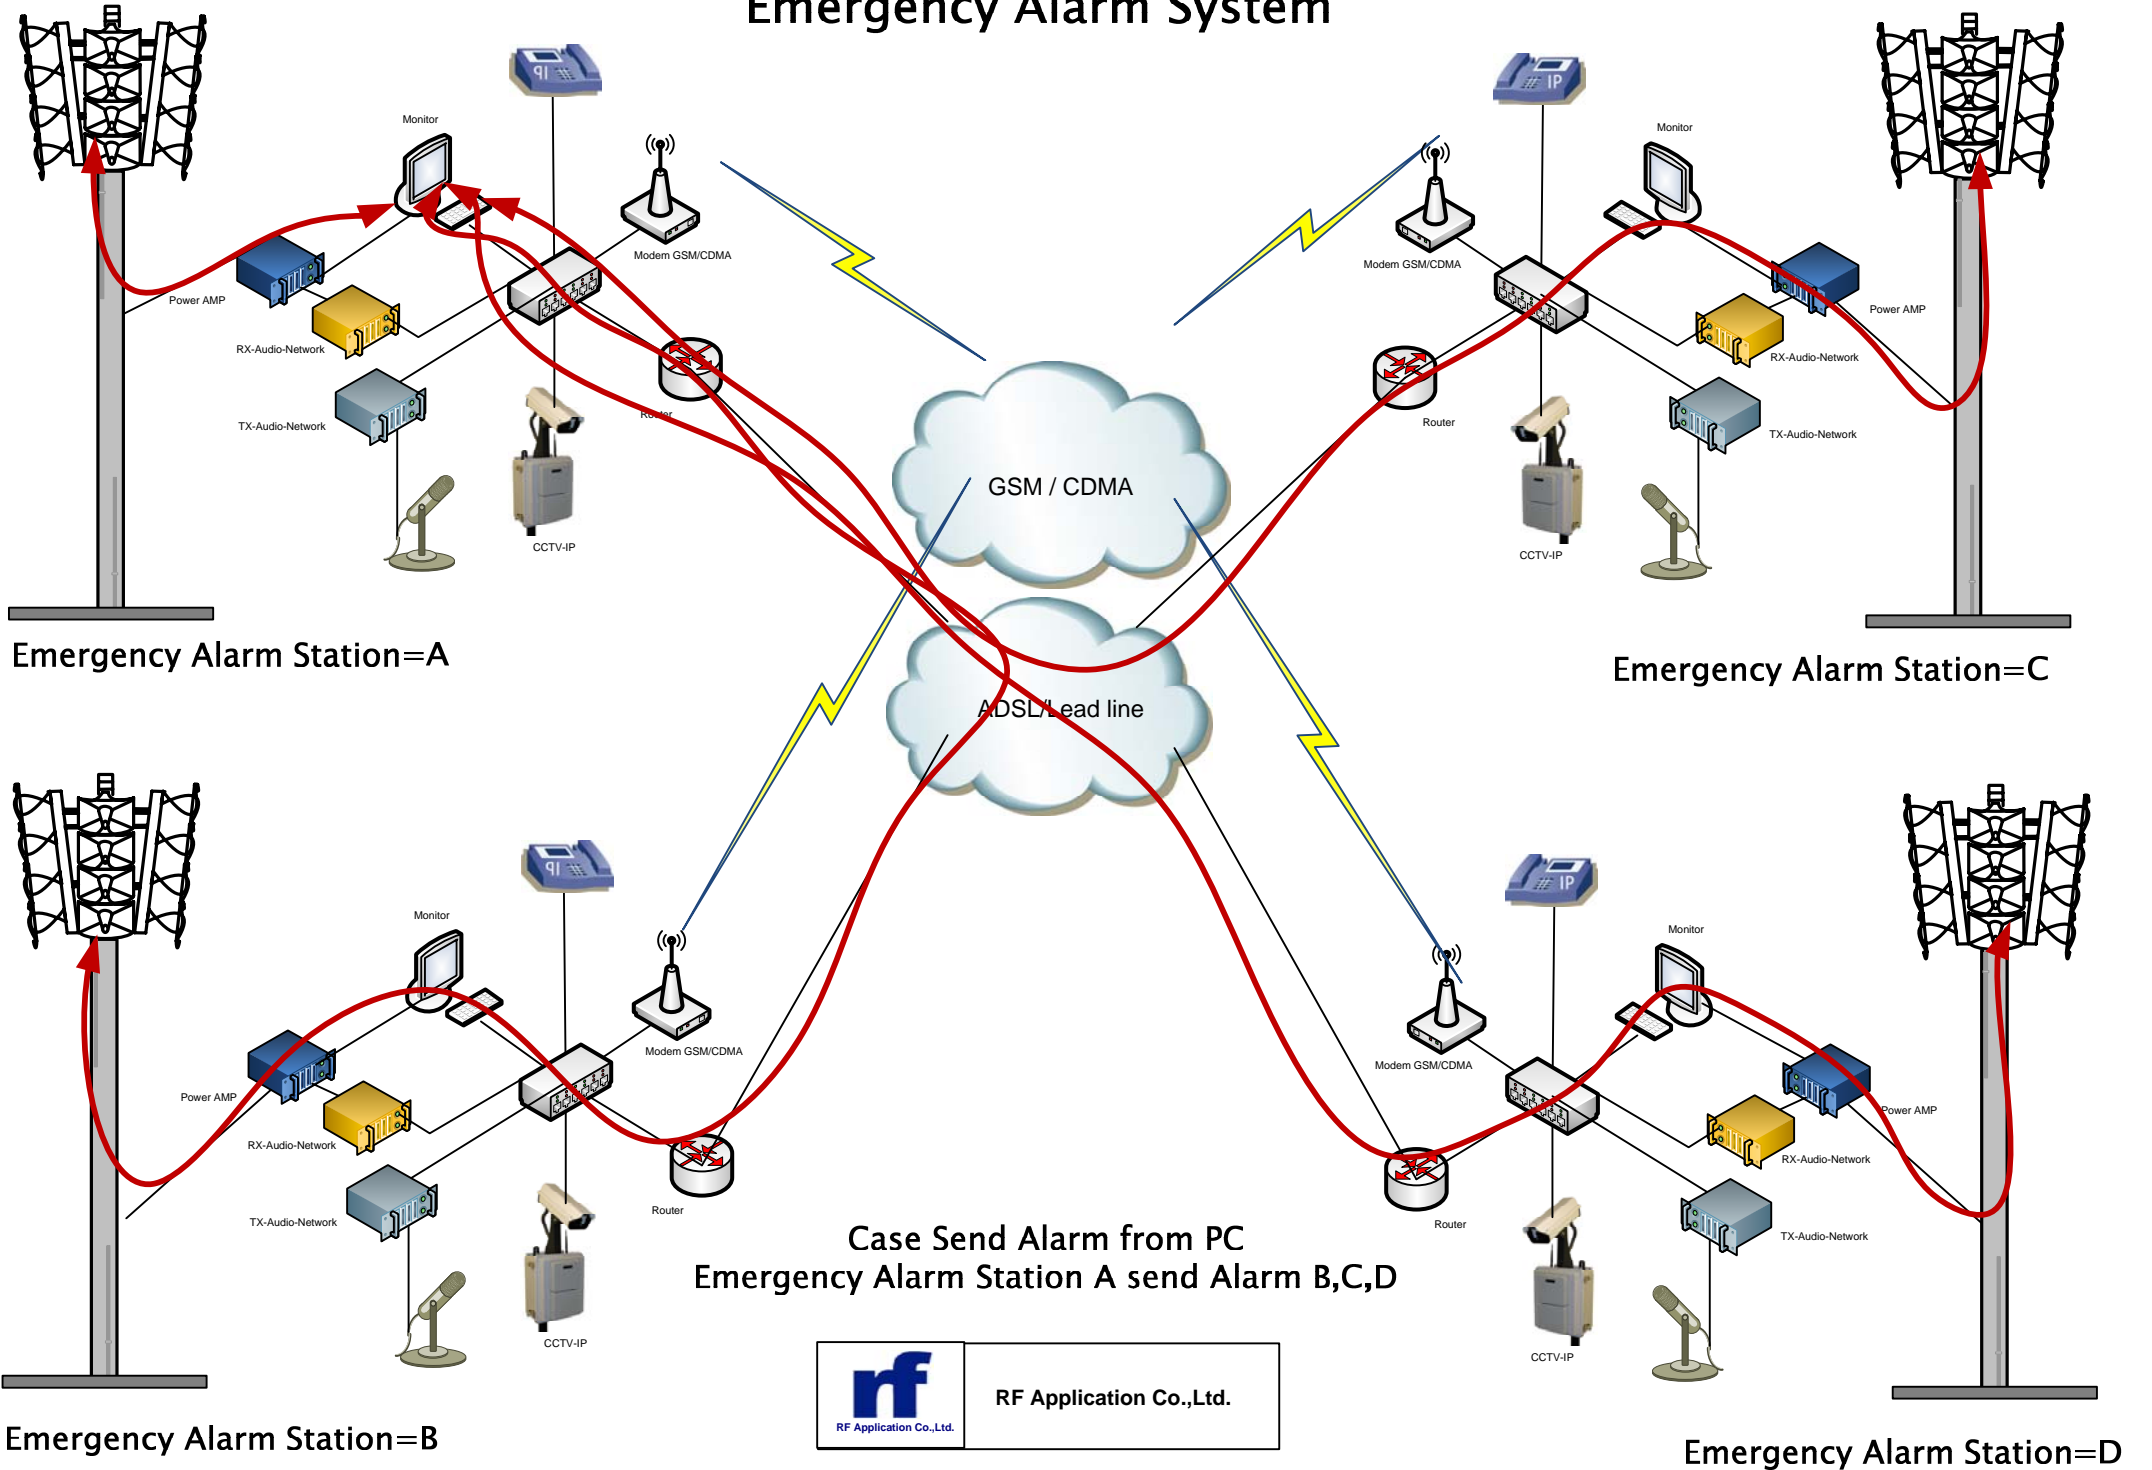

Emergency Alarm Station=A

Emergency Alarm Station=C

Emergency Alarm Station=B

Emergency Alarm Station=D

Case Send Alarm from PC
Emergency Alarm Station A send Alarm B,C,D



Emergency Alarm System

